


FLEXIBLE STUD RAIL PARTS GUIDE 1

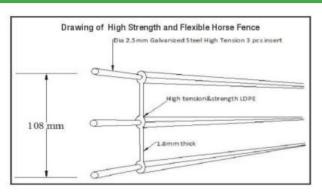

Watt Plastics Flexible Stud Rail is 108mm wide and contains 3 steel wires for extra strength . The rail attaches at end posts and slips freely through the line post brackets to allow rail flexibility. We recommend post spacings between 3 and 4m and we do not recommend straining more than 100 per run.

Flat Connector

Attaches to the fence post allowing the stud rail to run between the post and connector. Screws supplied.





Corner Connector

Attaches on the inside of a corner post allowing the stud rail to run between the post and connector to create a corner. Screws supplied.





End Bracket

Attaches to an end post to be used for all starts and ends of runs fixing the stud rail in place. Screw supplied.





Watt Plastics Limited Email: info@wattplastics.com Tel: 07702 244365